


# **OPERATION MANUAL**


All persons involved in operation or maintenance must read and understand the Safety Instructions before starting operation.

#### **▼Installation of Tag**

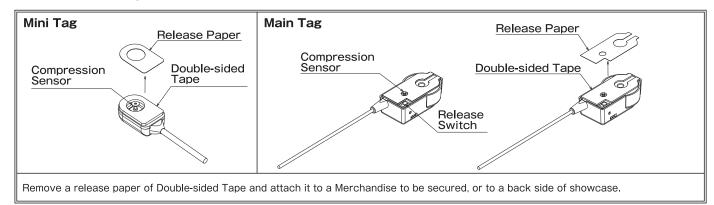

- Note: \* Select flat and smooth surface for attaching Double-sided Tape.
  - \* Approx. 2 hours are required to obtain a full adhesion.
  - \* Once adhesive tape is removed, the adhesive power is drastically reduced. Use a new tape (Sold separately) to secure proper operation.


## **▼** Setting of Alarming Buzzer

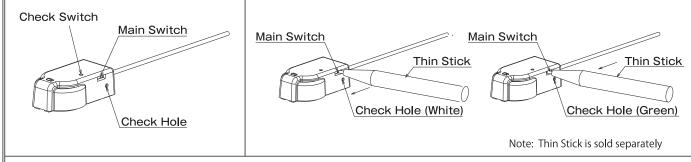

Set the Main Switch from OFF to ON with Thin Stick. If the color of Check Hole changes from White to Green, the setting of Alarming Buzzer is completed.

Note: For Mini-Tag, if the Tag is not firmly attached, alarming starts right after the Main Switch is ON. When alarming starts, check if the Mini-Tag is properly installed.


## **▼** Release of Alarming Buzzer

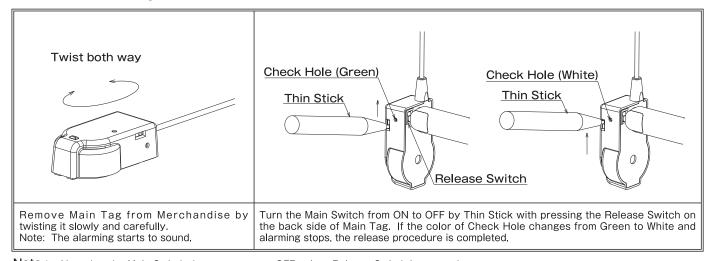

Note: \* Note that the Main Switch does not move to OFF unless Release Switch is pressed.

- \* In case Alarming Buzzer is set soon again, wait for at lease 10 seconds from the release work.
- \* For removing the Tag, twist the Tag slowly and carefully. Removing by strong force or by tools like a screwdriver may possibly damage the Tag.

▼ Checking Battery Level (Also can be used to confirm Alarm Buzzer set up.)

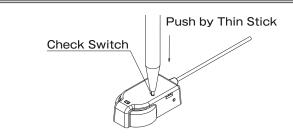


Battery Level can be checked by pushing the Check Switch on Main Tag. If Alarming Buzzer sounds when the switch is pressed, the Battery Level is good.


Note: If Alarming sound level is low, or if it passed more than 8 years after the Main Tag is attached to Merchandise, it is recommended to replace with a new Battery even if Alarming sounds well.

# **▼ Change the Battery** (Lithium Battery type CR2032)


### 1. Remove Double-Sided Tape

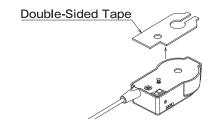

#### 2. Remove Screw

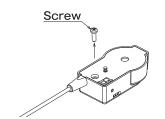


## 3. Take off Lower Case

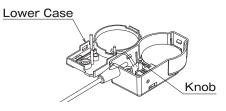

- \*1 There are Fixing Hooks in Lower Case. Release it with Screwdriver.
- \*2 Do not lose the Knob.
- \*3 Be careful not to damage the cable of Buzzer.


Note: Be careful not to break Fixing Hooks and other main parts.

## 4. Take PCB out from Upper Case.

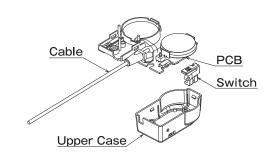


- \*1 Be careful not to cut the cable connected to PCB.
- \*2 Do not lose the Switch.

# 5. Take the Battery out sliding on PCB.

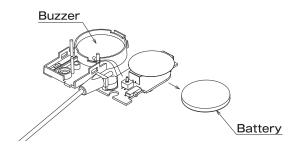

\*1 Pay attention not to damage the cable of Buzzer when Battery is taken out.

# 6. Place a new Battery sliding on PCB firmly.

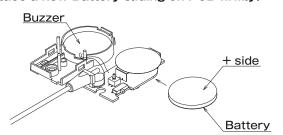

\*1 After replacing with a new Battery, take the above steps
1. - 4. conversely for reassembly.

Note: Pay attention to the direction of polarity of Battery.

